

Step 1: log in to gui interface

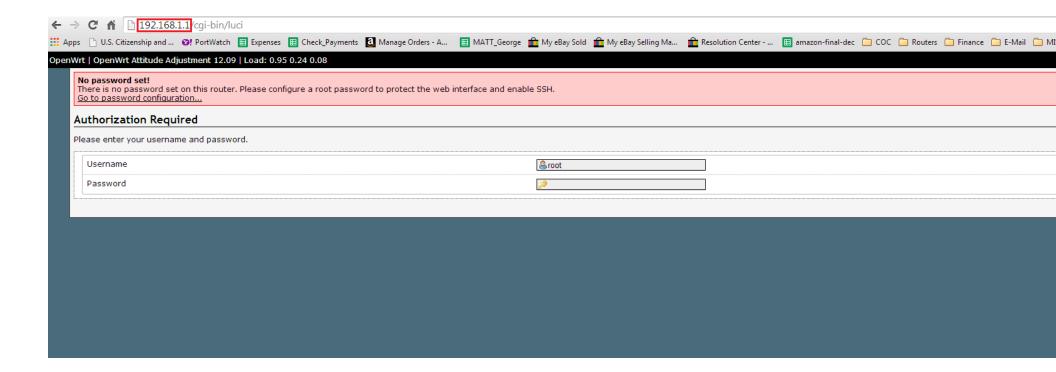

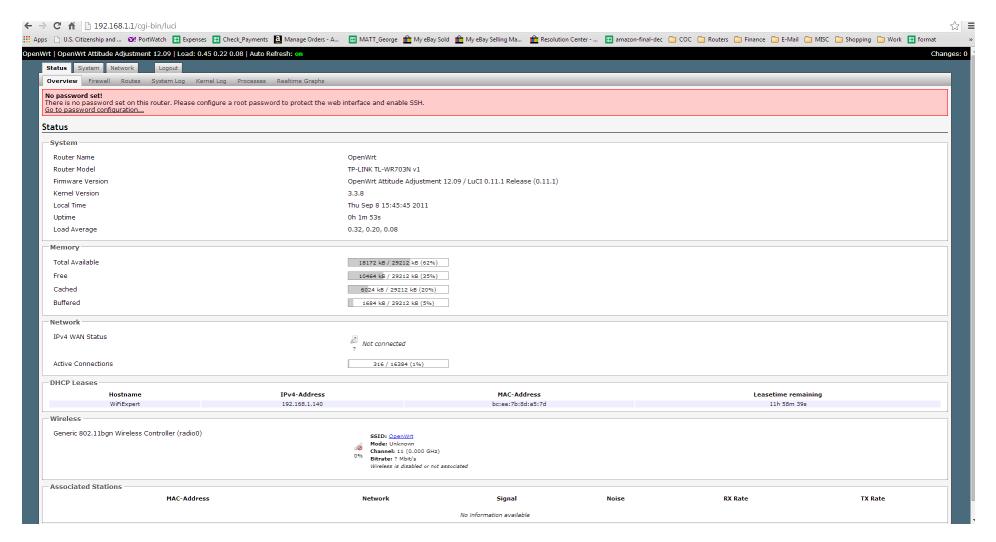

Step 2: Click on network/wifi/enable wifi

