

Thank you for purchasing Extreme Antenna Mod Kit for your Netgear router. We will show you how to install the antennas for your router.




Netgear WN2500RP Antenna Installation Instructions:

1. No soldering required
2. Open the unit. You can use a torque wrench T9.



WiFi_Expert



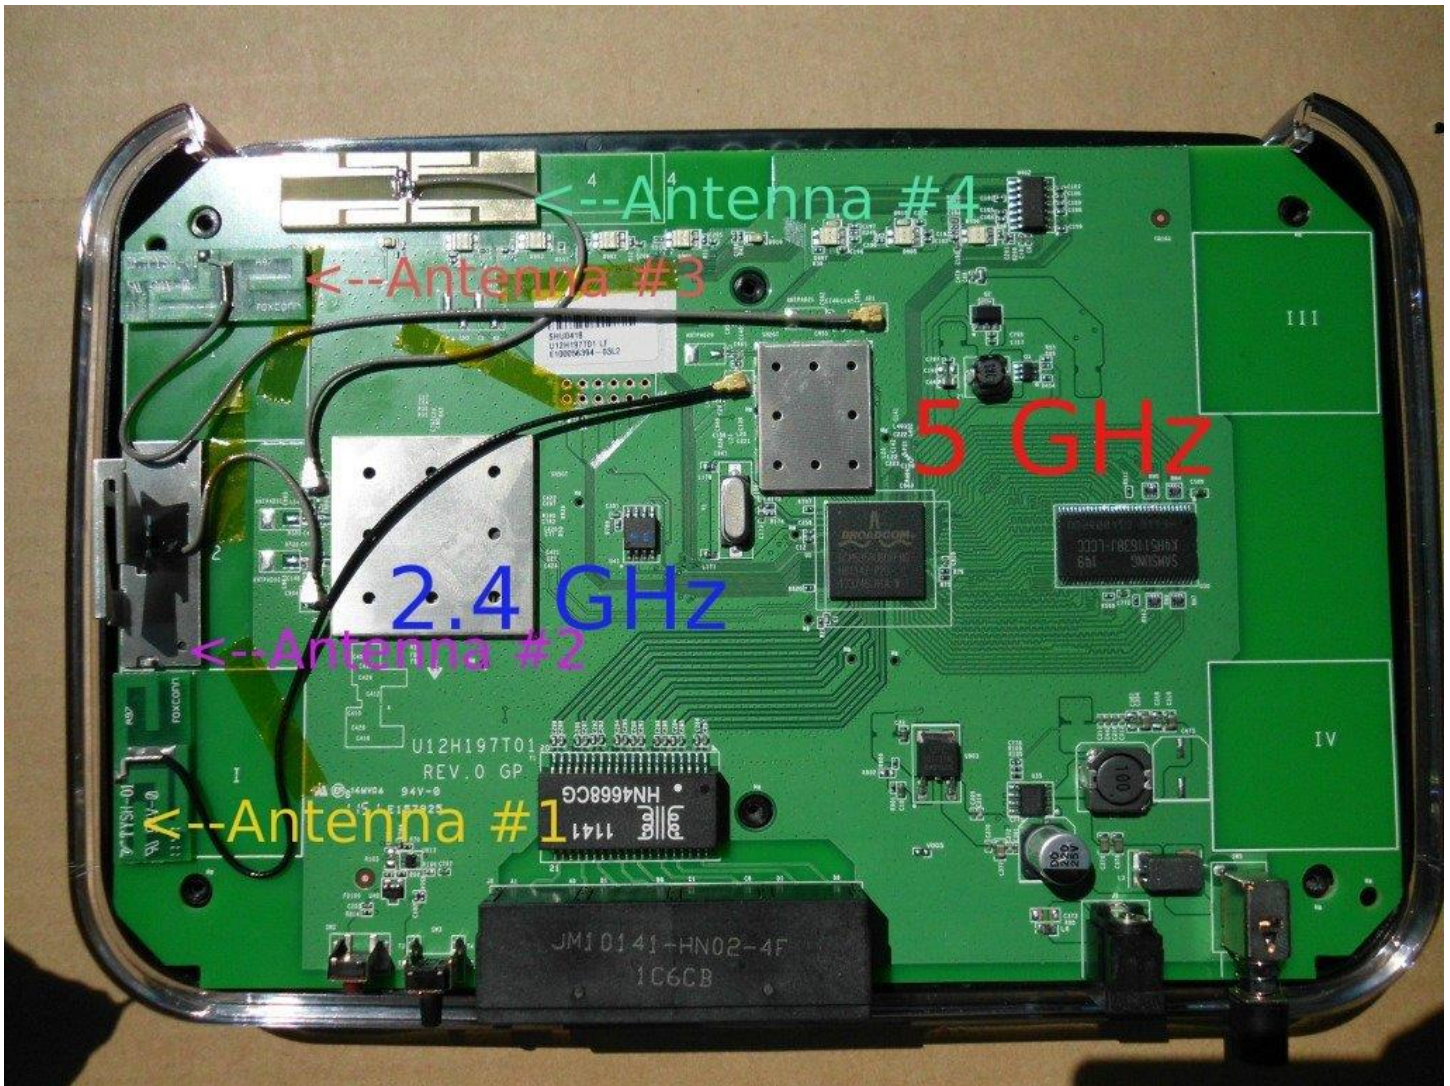

Inside of the Netgear WNDR3400 v.1

Before the modification.

3. Remove the UFL antenna connectors and antennas.
4. Now this part requires some patience.
5. Fitting your new UFL connectors into the little holes can take a little practice, and patience
6. So do this first: Practice removing the original UFL antenna cables and then putting them back on.
7. Attach the U.FI cables on all connectors.



8. Now you are ready to drill.
9. Remove the board from the unit.
10. Mark on the unit with a pen or whatever where you want to drill.
11. Look at the image below on to where to mount the Antennas.
12. Drill a smaller hole first with a smaller bit and then go ahead and finish the drilling with **the 1/4" drill bit**.
13. You may want to get someone to help you hold the unit in place as you drill. Hold the unit vertically on a solid surface before drilling. Take your time. No hurry!

14. After drilling there will be a little plastic left around the inside hole that will need removing. Just use a kitchen knife or other small knife to remove the plastic.

15. Attach the UFL cables and the RP-SMA and you are set to go.

Be sure the nut on the RP-SMA plug is nice and tight, otherwise your antennas will flop.

When putting the case back together make sure the wires are secured in place (use clear tape for that) otherwise you can pinch them with screws!

Enjoy