

HOW TO ASSEMBLE CLAMP CONNECTOR BY WIFI EXPERT LLC


STEP 1: OPEN THE CONNECTOR AND SLIDE MAIN NUT AND WASHERS OVER THE CABLE (SEE BELLOW)
THEN STRIP THE JACKET ONLY ON THE CABLE AND SLIDE LAST WASHER OVER THE BRAIDED SHIELD.



STEP 2 – FOLD THE BRAID OVER THE WASHER AND SLIDE IN THE JACKET BETWEEN THE BRAIDED SHIELD AND FOIL, USE WISE AS SEEN ON THE PICTURE TO FORCE THE JACKET ALL THE WAY IN (MUST SLIDE ALL THE WAY IN!)





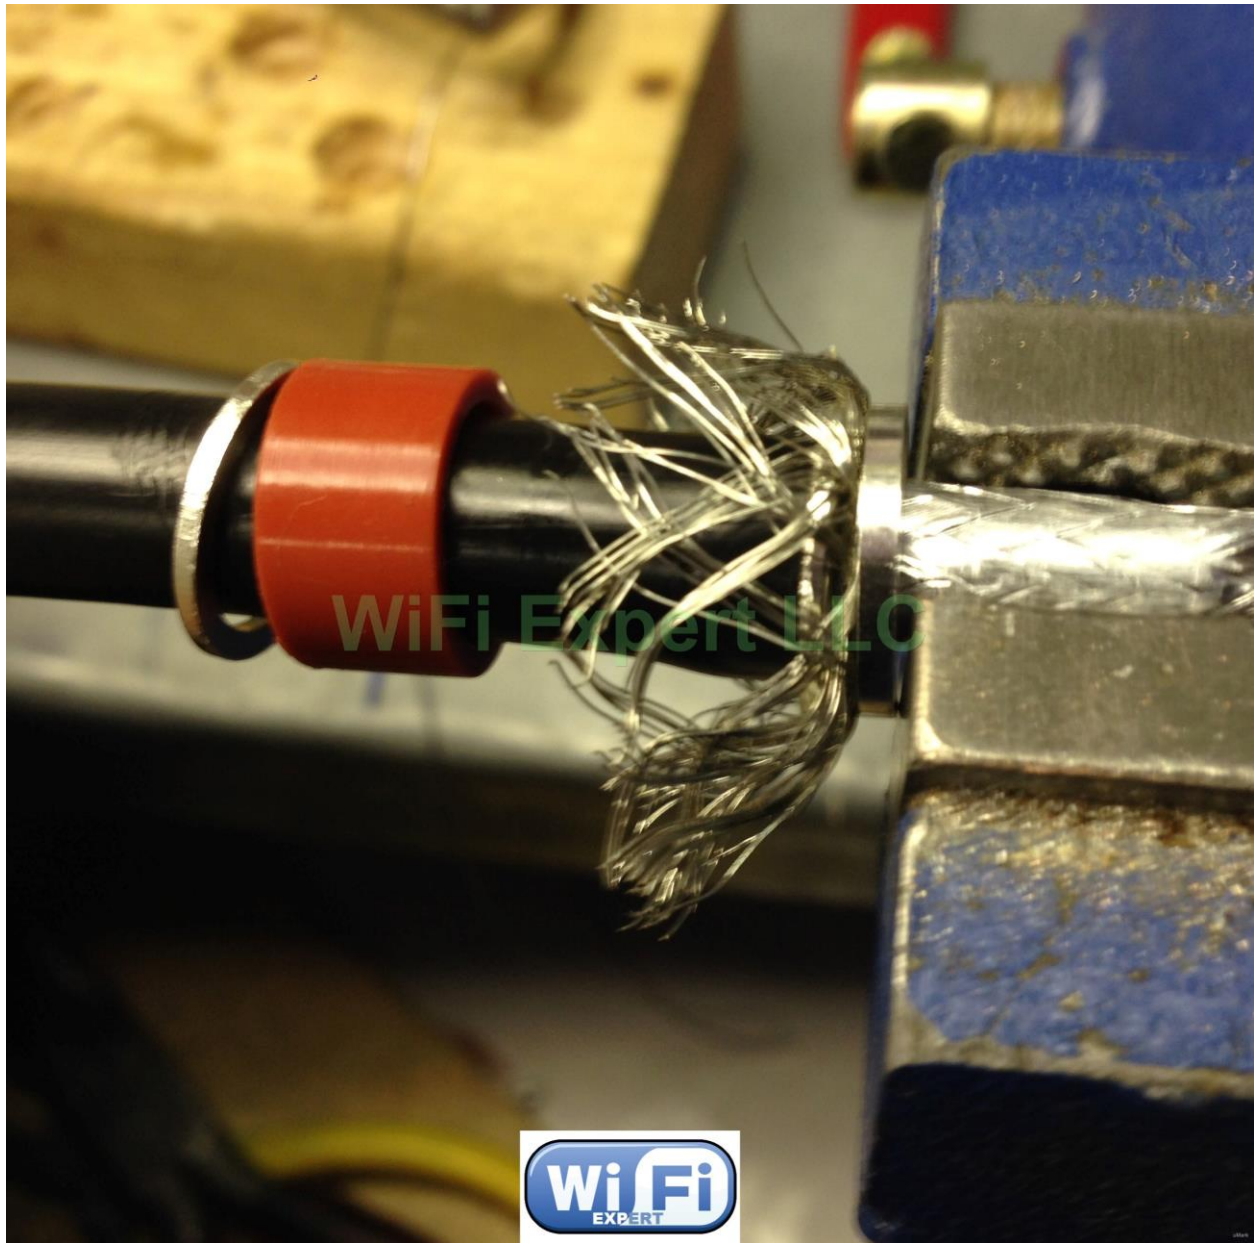

STEP 3: CUT ALL THE ACCESS HAIRS AND STRIP THE ISSOLATION PORTION OF THE CABLE LEAVING CENTER CONDUCTOR EXPOSED.



STEP 5: CUT THE CENTER CONDUCTOR TO FIT THE PIN WITH ABOUT 1MM LEFT BETWEEN THE PIN AND THE ISOLATION PART OF THE CABLE. PLEASE NOTE SOME CONNECTORS MIGHT NEED TO BE SOLDERED AND SOME ARE EZ TYPE (SLIDE ON ONLY). REMOVE THE PIN FROM THE PLASTIC CASING IF REQUIRED TO SOLDER.



STEP 6: INSTALL THE REST OF THE CONNECTOR.





THE CONNECTOR MUST FULLY CLOSE (TIGHTEN ALL THE WAY), IF IT IS TOO HARD TO DO IT, YOU DID SOMETHING WRONG.

Please e-mail us at wifi.expert.52@gmail.com with any questions.